

# TRIMS & MOULDINGS


## SPECIFICATIONS & INSTALLATION




BevelMark • Ocean Crest

LIONSFLOOR.COM | 888-575-9220


### END CAP

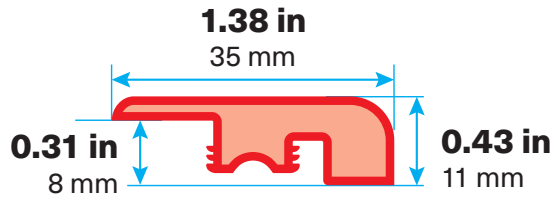


Apply curing glue on the reverse side.

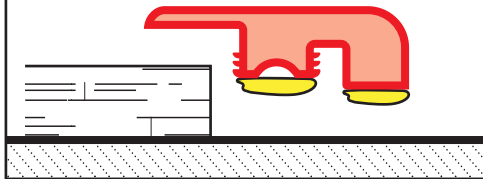


Press and fix until the glue is cured.

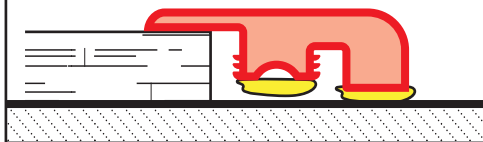

### REDUCER

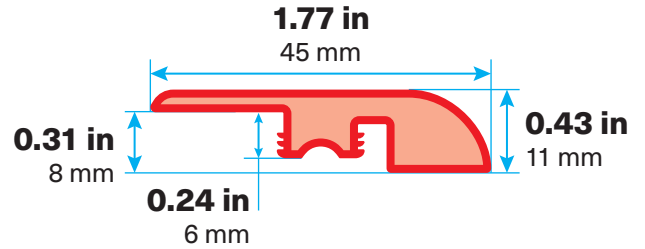


Apply curing glue on the reverse side.

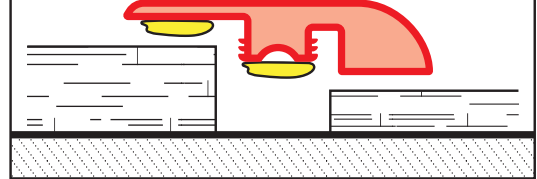


Press and fix until glue is cured.




### T-MOULDING

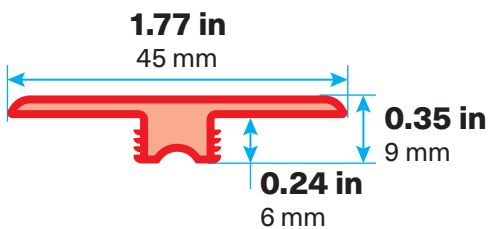

Apply curing glue on the reverse side.

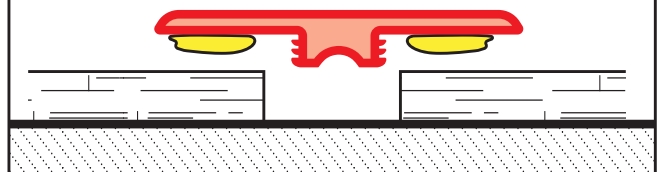

Press and fix until glue is cured.

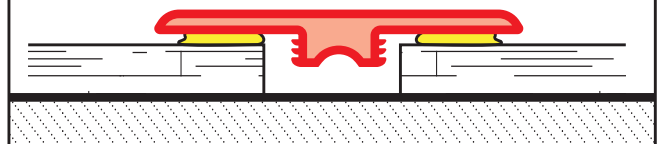

# TRIMS & MOULDINGS




## SPECIFICATIONS & INSTALLATION






BevelMark • Ocean Crest

LIONSFLOOR.COM | 888-575-9220


### QUARTER ROUND

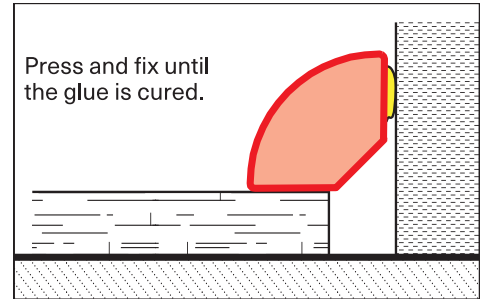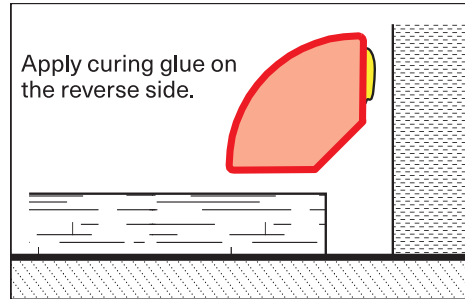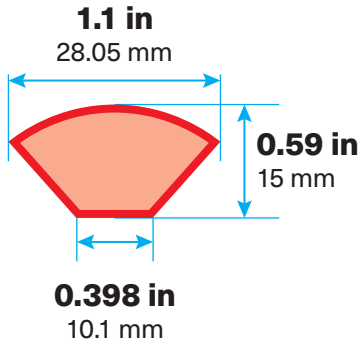

### FLUSH STAIR NOSE

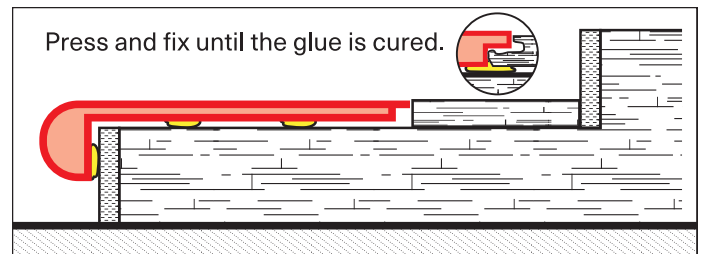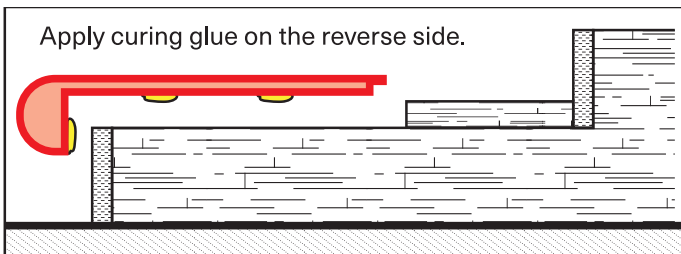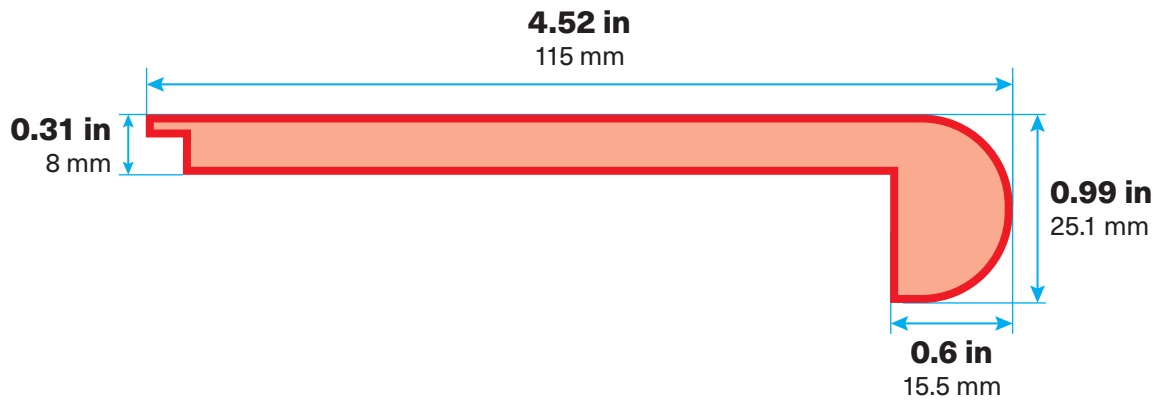

### STAIR TREAD

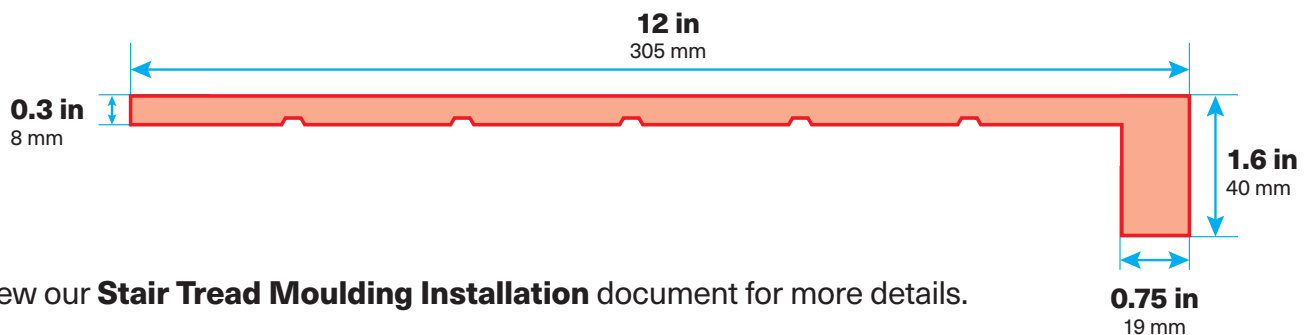

View our **Stair Tread Moulding Installation** document for more details.