

TRIMS & MOULDINGS


SPECIFICATIONS & INSTALLATION




Canyon Coast

LIONSFLOOR.COM | 888-575-9220


END CAP

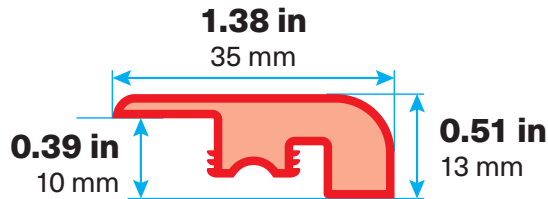


Apply curing glue on the reverse side.

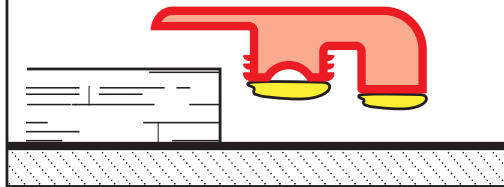


Press and fix until the glue is cured.

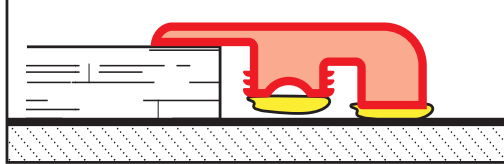


REDUCER

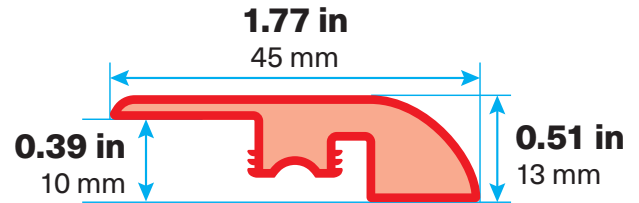


Apply curing glue on the reverse side.

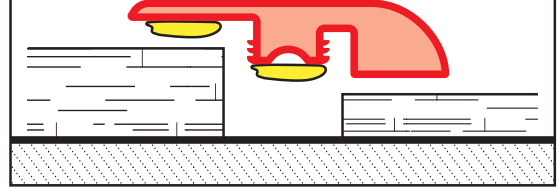


Press and fix until glue is cured.

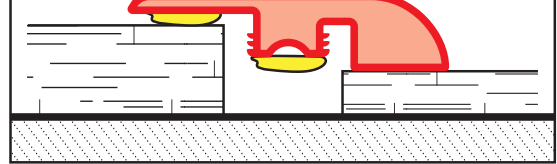


T-MOULDING

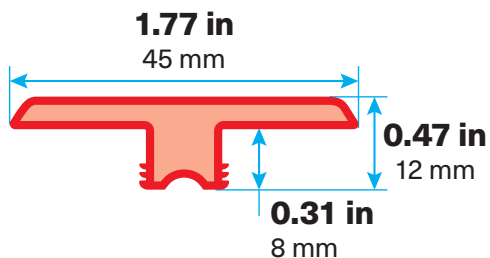

Apply curing glue on the reverse side.

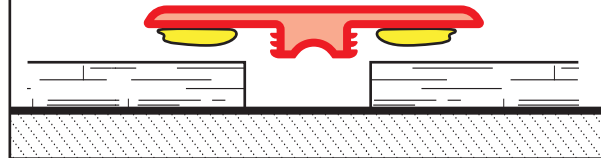

Press and fix until glue is cured.

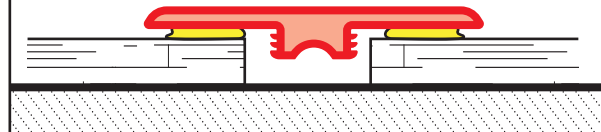

TRIMS & MOULDINGS




SPECIFICATIONS & INSTALLATION






Canyon Coast

LIONSFLOOR.COM | 888-575-9220


QUARTER ROUND

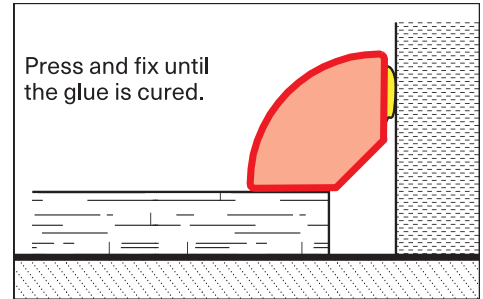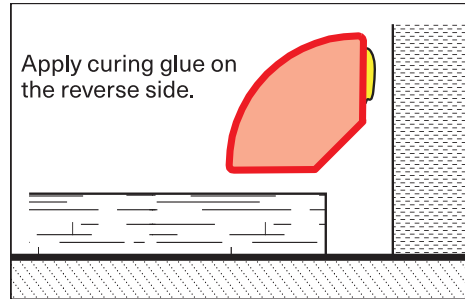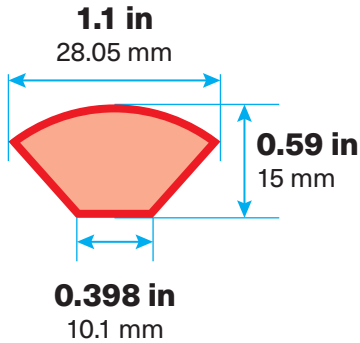

FLUSH STAIR NOSE

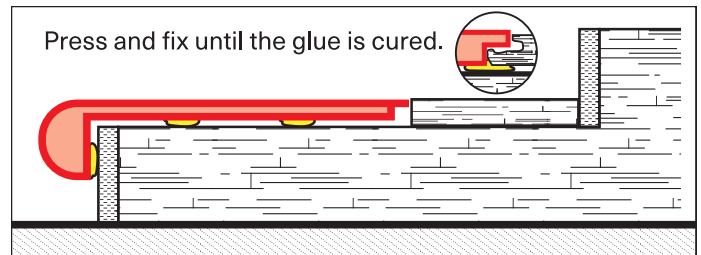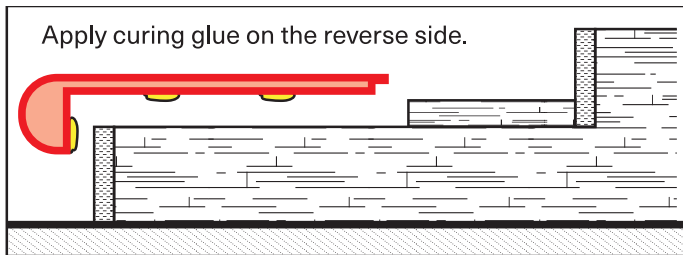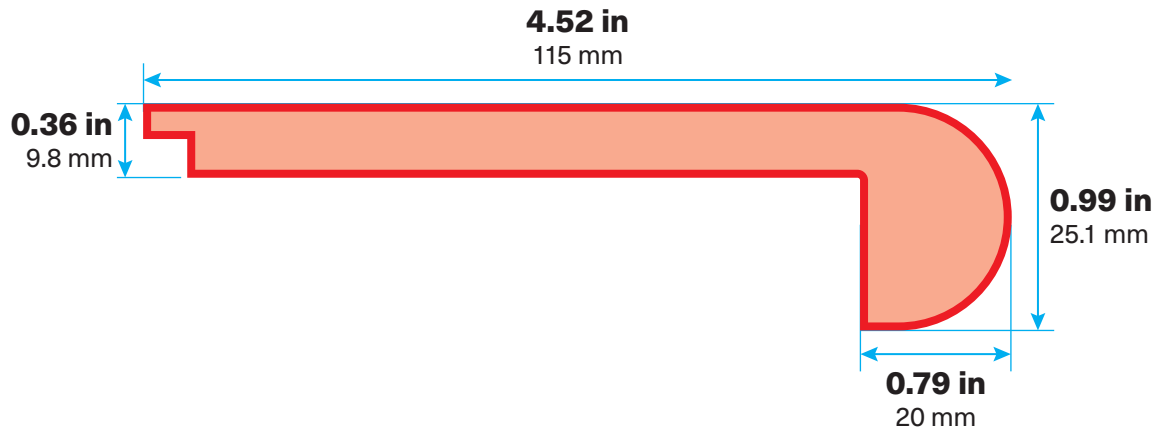

STAIR TREAD

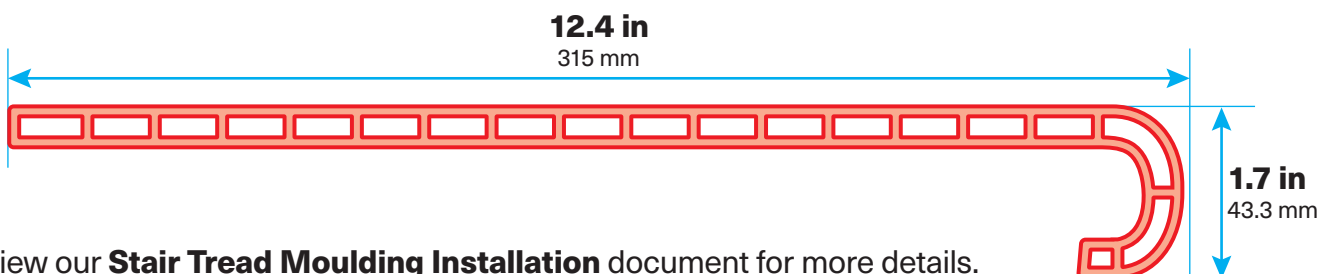

View our **Stair Tread Moulding Installation** document for more details.